


Model selection Side carry

What is "side carry"?

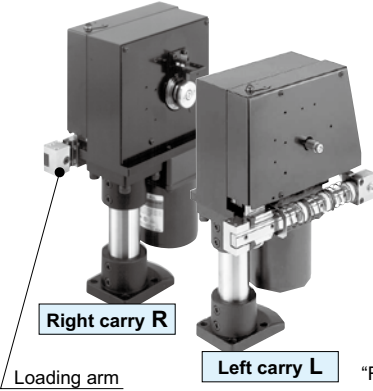

This is a type whose loading arm is installed at the bottom left or bottom right. A straight feeder or a conveyor can be placed in the space under the arm.

Stroke

80 to 160 mm (X: horizontal)
20 to 50 mm (Z: vertical)

- * For the left carry, its arm moves along the left side of the unit (when viewed from the rear of the unit). For the right carry, its arm moves along the right side.

"R" or "L" is added to the end of model Nos.

		Stroke (X x Z) mm				
		80 x 20	100 x 30	100 x 50	160 x 35	160 x 50
<p>X6072AR X6072AL</p>	<p>X6071R X6071L</p>					
	<p>X6071WR X6071WL</p>					
	<p>X6076WR X6076WL</p>					
	<p>X6071SR X6071SL</p>					
	<p>X6071WSR X6071WSL</p>					
	<p>X6074HSR X6074HSL</p>					
	<p>X6076WSR X6076WSL</p>					
				<p>X6074R X6074L</p>		
					<p>X6074SR X6074SL</p>	

* X6074SS 160 mm x 70 mm
Please contact us for detailed information.