



## Dimensions

DRT2-AD04  
DRT2-AD04H

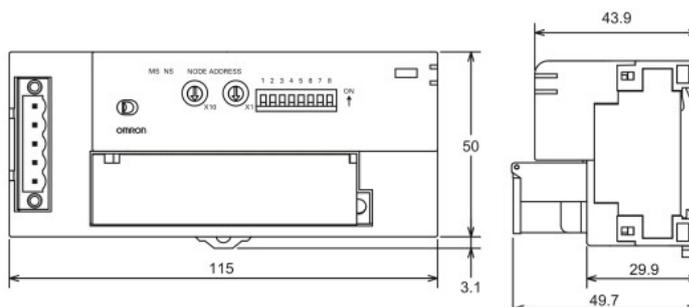


DRT2-DA02

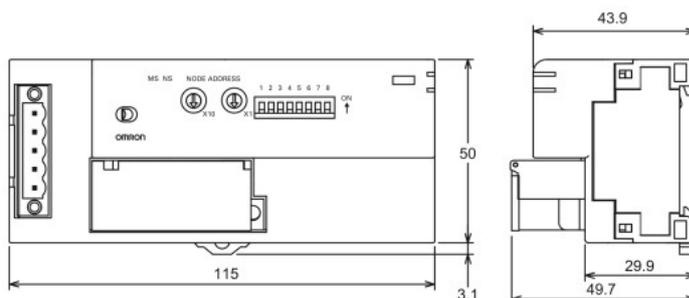


## Wiring Diagrams

DRT2-AD04

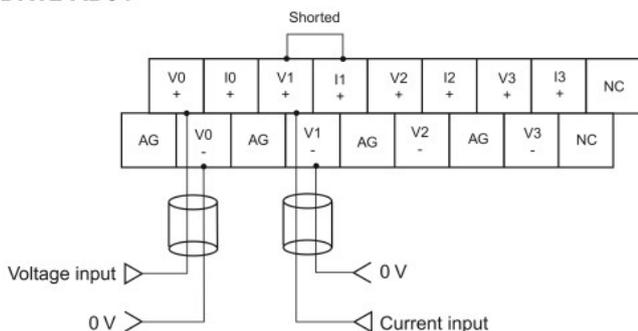


**Note:** With using a current input, always short the V+ and I+ terminals. (Use the shorting bar provided with the Unit.)

DRT2-AD04H

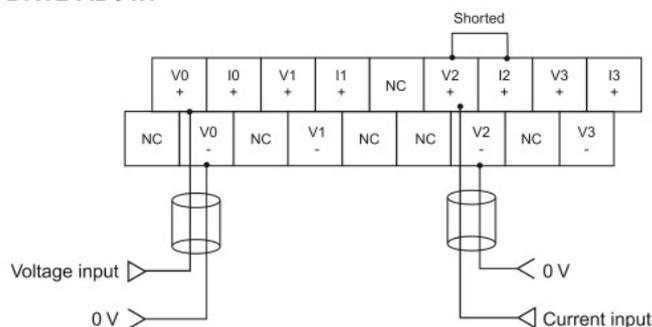

**Note:** With using a current input, always short the V+ and I+ terminals. (Use the shorting bar provided with the Unit.)

DRT2-DA02

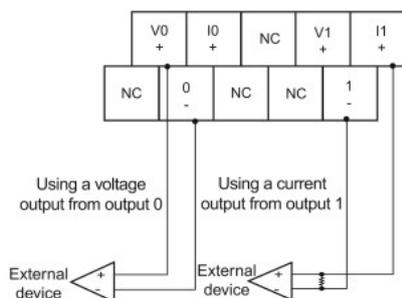

**Note:** The voltage and current output ranges (signals) are set with either the DIP switch or the Configurator settings.