
## **Fixture Slides**

**Guide Rail Type** 

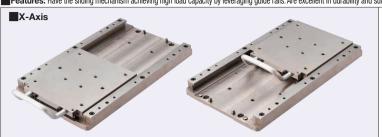




Tips

By repositioning the ball buttons and stroke end stopper pins, the stroke can be shortened.

Shortening the stroke can prevent the handle from protruding from the base plate 0.D.

For how to adjust the stroke, see the Stroke Adjustment Method Table.

- Antirust oil is applied to the sliding surface before delivery.
- For the customer's convenience, in addition to the undersized and removable stopper pins installed onto the stopper part (4 places lengthwise), the oversized stopper pins are included with the product. Replace the undersized stopper pins with the oversized ones, if needed.

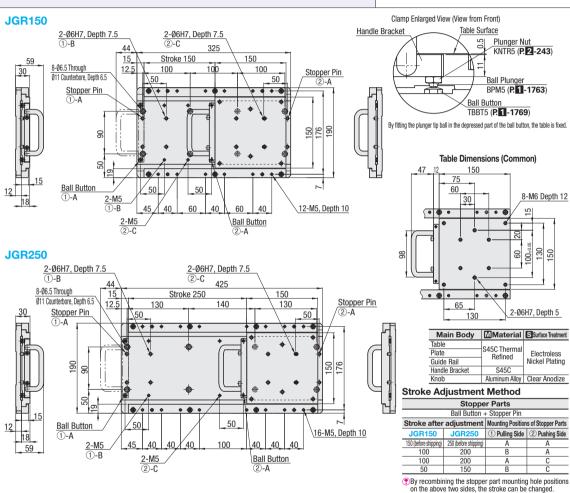

Part Number		Stroke	Table	Base Length	(Ref. Value)	(Ref. Value)	Load Capacity	Weight	Unit Price
Туре	No.	(mm)	Size (mm)	(mm)	Required Thrust (N)	Plunger Holding Force (N)	(kN)	(kg)	Unit Price
JGR	150	50, 100, 150	150x150	325	10	30	37.2	9.2	
	250	150, 200, 250	150x150	425	10	30	37.2	11,1	

- TUpon delivery, the stroke is set to 150 for JGR150, and to 250 for JGR250.
- Required Thrust: Force required to move the table by using the knob (on the sliders having antirust oil applied)
- ©Load Capacity: Max. allowable value of load applied vertically to the table surface
- Values on the (Ref. Value) columns in the above table are measured when no load is applied.







