

Specifications 2

Blow out protection: (Equipped on the top of pressure gauge)

Blowout disk is used to protect window being blown up in case of high pressure leak happen from the failure of bourdon tube. The disc breaks and releases inner over pressure.


[Caution]

To maintain appropriate performance, space wider than 10mm against wall behind installing gauge is needed. Modification toward disk and plug, blocking out the disk are prohibited.

About vent plug

For pressure 1MPa and below, pressure, compound and vacuum gauge have a chance to indicate error due to its inner pressure change caused by ambient temperature change. Ensure to pull up yellow vent plug on the top with vent hole to let in air.

Please note that there are possibilities to slightly come out glycerin and/or aqueous glycerin solution attached to the inner part of the vent plug when the yellow vent plug is pulled up and damage nearby equipment. Please also restrict that the mounting position should be vertical only.

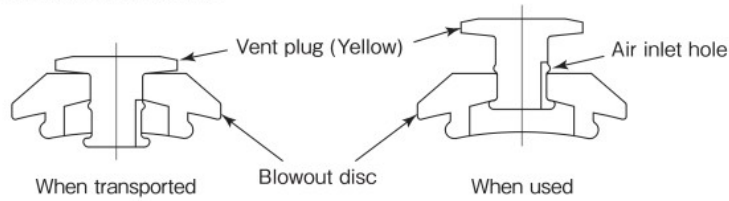

*Pull vent plug down when leak of glycerin is considerable, or outdoor use or place in high humidity. Note that indication error can be generated based on the above reason.

Safety mark (Set pointer):

Green colored safety mark can move to arbitrary position.

For indication of set value	For indication of setting range
Combination of two marks forms arrow to indicate set value.	Two left and right safety mark move to upper and lower limit.

* Two safety marks always come when specified.

Dimensions

Unit: mm

