

LED illuminated Loupe for checking the holes, grooves, and inside walls.

BORELOUPE Series

It is suitable for simple check holes or deep grooves in mass production workshops.

A bright white LED is used at the light source and the line magnification of the loupe lens can be switched between 2X and 3X. The dust prevention cover is installed to the objective lens end and the protection cover is installed to the upper lens.

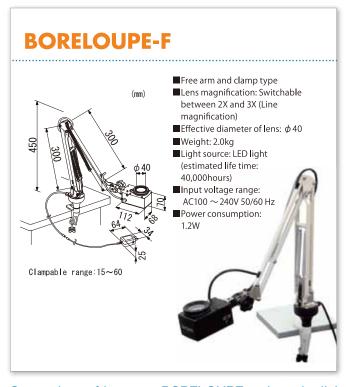

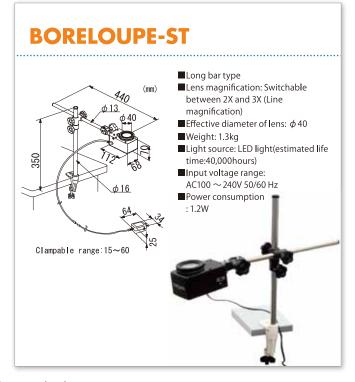

Comparison of between BORELOUPE and nearby lighting method


Comparison of between DonicLoor L and nearby light			
	Inside of pen cap	Burrs in horizontal hole	Deep hole made by die casting
Object			
Field of view of BORELUOPE		0	0
Field of view of nearby lighting	0	0	0

Out line

- BORELOUPE is an illuminated loupe consisting of two lenses.
- Since the coaxial lighting optical system is employed. Bore loupe can light up parts
 which cannot be lit up and are difficult to check with an ordinary illuminated
 magnifier or an illuminated loupe.
- A bright white LED is used at the light source and the line magnification of the loupe lens can be switched between 2X and 3X. The dust prevention cover is installed to the objective lens end and the protection cover is installed to the upper lens.
- There are two types of the stand: model F of free arm type and Model ST in which the crossbar is jointed to the stand pole.

Conventional microscope or bore scope of incident illumination type of endoscope have been used for checking the parts mentioned above, but they are not easy to use in mass production workshops for various reasons, BORELOUPE is suitable for all check of stop holes or deep grooves in mass production workshops.

Try BORELOUPE to reduce the time and cost, and to improve the quality.

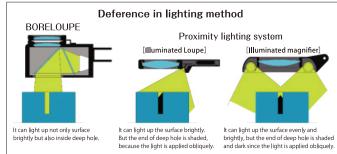



The polarizing filter for BORELOUPE (Exclusive use for 3X lens)

The polarizing filter has a characteristic of transmitting only the light wave components in one oscillating direction among components in random oscillating directions.

Using this characteristic, unnecessary surface reflecting light from a specimen can be estimated to improved observation and inspection efficiency, and reduce fatigue. This filter also has dimming effect and can reduce the intensity of light from a florescent lamp.



The Power up lens for BORELOUPE (Exclusive use for 3X lens)

When 3x ore large magnification is necessary, you can increase the magnification to 3.3x by simply mounting this lens onto the upper lens. Fi this option is used, the working distance (the distance between the bottom of the BORELOUPE and the specimen) becomes very short. Take care not to hit the specimen against the glass parts in the BORELOUPE.